

便携式电池的可拆卸性

(适用于 CPD30~35-K2C11LI-S/CPD30~35-K2B11LI-H/CPD40~50-G2A11LI)

Information regarding removability and replaceability of portable batteries

(For instrument for CPD30~35-K2C11LI-S/CPD30~35-K2B11LI-H/CPD40~50-G2A11LI)

Information regarding removability and replaceability of portable batteries

(For instrument for CPD30~35-K2C11LI-S/CPD30~35-K2B11LI-H/CPD40~50-G2A11LI)

1. 将仪表反扣于水平桌面上，拆下后壳上的 8 个边角上以及中间的螺丝。
1. Remove the all the screws of the cover.
1. Retirez toutes les vis du couvercle.



2. 拆下后壳上的 8 个螺丝后，将仪表正面朝上，将上盖向下翻开。注意下方线路板，接着拆除线路板 4 个边角上的螺丝

2. After removing the screws from the back cover, turn the display face up and turn the top cover down. Pay attention to the circuit board inside, and then remove the screws on the circuit board.

2. Après avoir retiré les vis du capot arrière, retournez l'écran vers le haut et rabattez le capot supérieur. Faites attention au circuit imprimé à l'intérieur, puis retirez les vis du circuit imprimé.



3. 拆下线路板 4 个边角上的螺丝，将线路板向左边翻开，即可看到纽扣电池，更换纽扣电池即可

3. Remove the screws of the circuit board, open the circuit board to left, and you can see the button battery. Replace it as needed.

3. Retirez les vis du circuit imprimé, ouvrez le circuit imprimé vers la gauche et vous pourrez voir la pile bouton. Remplacez-le si nécessaire.

